

Basecoat WB MAZ46G Machine Grey

Technical Bulletin

09/11/2019

L8.07.06b UK & Ireland

DESCRIPTION

Machine Grey 46G is one of Mazda's state of the art finishes to compliment Kodo design using its Takuminuri paint technology.

The repair of this color is based on the standard 2 stage TDS application with an additional 2-3 overthinned basecoat layers to achieve its specific fine effect and finish of this color.

Mazda's description of this color:

"This color gives the impression that the vehicle's body has been sculpted from a solid steel ingot"

COLOR CHECK

Correct color match needs to be done by producing a number of color spray-out samples.

Prepare a set of 4 spray out panels applied with a black filler sanded with a minimum of P1000 grit and position them side by side.

1. Apply Basecoat WB GT MAZ46G according to TDS L1.09.02 (including mist coat) to all panels.
Remove and store one panel marked as **number 1**.
2. Add 200% of Activator WB to the Basecoat WB GT MAZ46G color.
Apply this mixture at increased distance as a standard mist coat to the remaining 3 panels.
Remove one panel and mark it as **number 2**
3. Again, apply this mixture at increased distance as a standard mist coat to the remaining 2 panels.
Remove one panel and mark it as **number 3**
4. Apply this mixture at increased distance as a standard mist coat to the remaining panel.
Mark this panel as **number 4**

Note: Ensure to use the same application technique on the vehicle!

After the final mist coat leave the basecoat to flash off completely, or cure for 10 minutes at 60°C and leave to cool down before applying the clearcoat

Complete the sprayout collection as painting the repair / vehicle

Basecoat WB MAZ46G Machine Grey

Technical Bulletin

09/11/2019

L8.07.06b UK & Ireland


SURFACE PREPARATION



Black Filler area

Final sanding step P500

Initial sanding steps may be executed with a coarser sanding grit (P320 – P400)

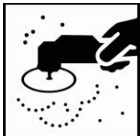

Preparation blending area WB GT 02 or 02/04

Final sanding step P1000

- Initial sanding steps may be executed with a coarser sanding grit (P600-P800)



Surface cleaning

Remove any surface contamination using an appropriate surface cleaner

BASECOAT WB GT PRECOAT / WET BED



100


Basecoat WB GT 02 or WB GT 02:04 (mixing ratio 60:40)

10

Activator WB



Apply one flowing coat the entire area under repair.

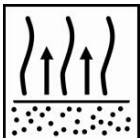

Flash-off by increasing airflow and or heat until completely dry.

If necessary, allow the surface to cool down

Basecoat WB MAZ46G Machine Grey

Technical Bulletin


09/11/2019

L8.07.06b UK & Ireland

BASECOAT WB GT MAZ 46G




100 Basecoat WB GT MAZ 46G
10 Activator WB

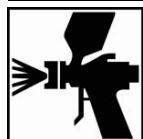


Spray gun set-up:
1.3 mm

Application pressure:
1.7 bar at the air inlet
HVLP max 0.6-0.7 bar at the air cap

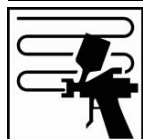

2 x 1 + mist coat

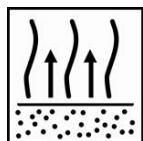

Allow to flash-off until completely matt and dry.




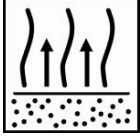


Basecoat WB MAZ46G Machine Grey

Technical Bulletin

09/11/2019

L8.07.06b UK & Ireland

BASECOAT WB GT MAZ 46G EFFECT COATS

	<p>100 Basecoat WB GT MAZ 46G 200 Activator WB</p>		
	<table border="0"> <tr> <td data-bbox="399 699 876 783">Spray gun set-up: 1.3 mm</td> <td data-bbox="906 699 1461 835">Application pressure: 1.7 bar at the air inlet HVLP max 0.6-0.7 bar at the air cap</td> </tr> </table>	Spray gun set-up: 1.3 mm	Application pressure: 1.7 bar at the air inlet HVLP max 0.6-0.7 bar at the air cap
Spray gun set-up: 1.3 mm	Application pressure: 1.7 bar at the air inlet HVLP max 0.6-0.7 bar at the air cap		
	<table border="0"> <tr> <td data-bbox="399 863 876 999">Application effect layers* *Increase distance, apply coats in even layers</td> <td data-bbox="906 863 1461 999">1-3 mist coats* *Due to the low viscosity, shake spray gun prior to application of the next coat</td> </tr> </table>	Application effect layers* *Increase distance, apply coats in even layers	1-3 mist coats* *Due to the low viscosity, shake spray gun prior to application of the next coat
Application effect layers* *Increase distance, apply coats in even layers	1-3 mist coats* *Due to the low viscosity, shake spray gun prior to application of the next coat		
	<table border="0"> <tr> <td data-bbox="399 1020 876 1157">Between coats: Until completely matt and dry</td> <td data-bbox="906 1020 1461 1157">Before clearcoat: Bake for 10 minutes at 60°C.</td> </tr> </table>	Between coats: Until completely matt and dry	Before clearcoat: Bake for 10 minutes at 60°C.
Between coats: Until completely matt and dry	Before clearcoat: Bake for 10 minutes at 60°C.		
	<p>Clearcoat application See clearcoat T.D.S.</p> <p>With the application of the clearcoat, apply a thin closed 1st layer</p>		
	<p>Use suitable respiratory protection Akzo Nobel Car Refinishes recommends the use of a fresh air supply respirator.</p>		

Basecoat WB MAZ46G Machine Grey

Technical Bulletin

09/11/2019

L8.07.06b UK & Ireland

Akzo Nobel Coatings LTD

Address: Unit 2B, Didcot Park
Churchward, Southmead Industrial Estate
Didcot, Oxfordshire, OX11 7HB
Tel: 00 44 (0)1235 862226

FOR PROFESSIONAL USE ONLY

IMPORTANT NOTE: The information in this data sheet is not intended to be exhaustive and is based on the present state of our knowledge and on current laws: any person using the product for any purpose other than that specifically recommended in the technical data sheet without first obtaining written confirmation from us as to the suitability of the product for the intended purpose does so at his own risk. It is always the responsibility of the user to take all necessary steps to fulfil the demands set out in the local rules and legislation. Always read the Material Data Sheet and the Technical Data Sheet for this product if available. All advice we give, or any statement made about the product by us (whether in this data sheet or otherwise) is correct to the best of our knowledge but we have no control over the quality or the condition of the substrate or the many factors affecting the use and application of the product. Therefore, unless we specifically agree in writing otherwise, we do not accept any liability whatsoever for the performance of the product or for any loss or damage arising out of the use of the product. All products supplied and technical advices given are subject to our standard terms and conditions of sale. You should request a copy of this document and review it carefully. The information contained in this data sheet is subject to modification from time to time in the light of experience and our policy of continuous development. It is the user's responsibility to verify that this data sheet is current prior to using the product.

Brand names mentioned in this data sheet are trademarks of or are licensed to AkzoNobel.

Head Office

Akzo Nobel Car Refinishes B.V., PO Box 3 2170 BA Sassenheim, The Netherlands. www.Lesonal.com